


TRACEABLE® FOOD/WATERPROOF/PIERCING/DROP-PROOF THERMOMETER INSTRUCTIONS

SPECIFICATIONS:

Display: ¼" LCD
Range: -58 to 536 °F / -50 to 280 °C
Resolution: 0.1° (-20 to 200), 1° outside of range
Accuracy: **Cat. No. 4369** - ±0.4°C
Cat. No. 4370 - ±1.0°C
Sampling Rate: 1 second
Features: Waterproof, Polycarbonate Case,
Stainless Steel Probe, On/Off Switch

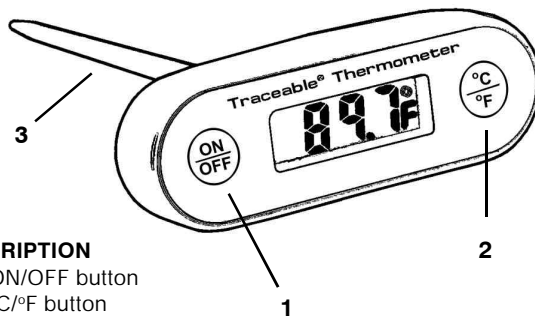

DESCRIPTION

- 1 - ON/OFF button
- 2 - °C/°F button
- 3 - Probe

OPERATION

1. Press "ON/OFF" button to turn on unit.
2. Press the "°C/°F" button to select Fahrenheit or Celsius.

ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high-quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indicators that the battery must be replaced. To replace the battery, loosen the two screws at the rear of the case. Remove the face of the thermometer taking care not to disconnect the internal wiring. Replace exhausted battery with a new 1.5V battery. Close the cover by tightening the screws. Replacement battery Cat. No. 1102.

NOTE: When replacing battery compartment cover, carefully ensure each cover is properly in place and screws tightened to maintain the unit's water-resistance. Incorrectly installed batteries may damage electronics.

WARRANTY, SERVICE, OR RECALIBRATION

For more information, please contact us:

[ExpotechUSA](#)
[10700 Rockley Road](#)
[Houston, Texas 77099](#)
[USA](#)

[281-496-0900 \[voice\]](#)

[281-496-0400 \[fax\]](#)

E-mail: sales@expotechusa.com

Website: www.ExpotechUSA.com