

TRACEABLE® LOLLIPOP™ WATERPROOF/SHOCKPROOF THERMOMETER INSTRUCTIONS

SPECIFICATIONS

Range: -50 to 300°C,
-58 to 572°F

Resolution: 0.1°C from -20 to 200°C,
1°C outside this range

Accuracy: **Cat. No. 4371:**
±1.0°C between
0 and 100°C

Cat. No. 4378:
±0.4°C between
0 and 100°C

Sampling Rate: 1 sec

Unit diameter: 1.75²

Stem length: 8²

Stem diameter: 0.14²

Overall length: 10.5²


Weight: 0.8 ounces

FEATURES

- Waterproof and shockproof
- Stainless steel sensor probe
- Max/Min memory recall
- °F/°C selectable
- One second sampling rate
- Protective plastic sleeve with clip and holder
- Low battery indicator

OPERATION

Remove Lollipop™ thermometer from the protective sheath. Press ON/OFF

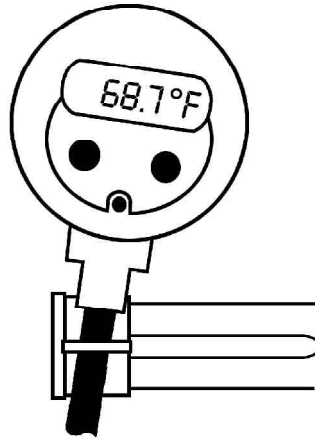

Insert the probe into the "loop" on the cover. It makes a perfect holder.

button to activate. Press °F/°C button to switch between Fahrenheit and Celsius temperature. Insert probe into the material to be measured and read display.

MAX/MIN MEMORY

To view the minimum temperature reached since activating unit, press MAX/MIN button. "MIN" appears on the display to indicate the minimum temperature recorded. Press MAX/MIN button a second time within 3 seconds to view the maximum temperature reached since activating unit. "MAX" appears on the display to indicate the maximum temperature recorded.

NOTE:

Three seconds after pressing the MAX/MIN button, the unit automatically returns to current sampling mode. Indicators "MIN" and "MAX" are no longer displayed. Turn the unit OFF to reset max/min to current temperature.

ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, please replace the battery with a new high quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

The Lollipop™ thermometer displays a low battery indication, "⬇️", when it is time to replace the battery.

Erratic readings, faint readings or no display are all indications that the battery must be replaced. Using a coin, turn the battery cover on back of the unit in the direction of the "open" arrow. Remove the exhausted battery and replace with a new battery. Make certain the positive (+) side is facing you. Replace the battery cover. Replacement battery Catalog No. 1102.

For more information, please contact us:

[ExpotechUSA](#)
[10700 Rockley Road](#)
[Houston, Texas 77099](#)
[USA](#)

[281-496-0900 \[voice\]](#)

[281-496-0400 \[fax\]](#)

E-mail: sales@expotechusa.com

Website: www.ExpotechUSA.com